

First of all, thanks a lot for you to choose our laser power supply products. To make good use of our product, please read this manual carefully in advance. Model of this product is MYJG-40 NW

40W Power Supply for CO₂ Laser Tubes



Model: MYJG-40 NW

I. Main Features

1. **Good Compatibility:** It can be applicable to 40W laser tubes manufactured by different factories.
2. **High Performance:** Fast response, Good engraving effect, it can prolong the service life of laser tube significantly.
3. **Open Circuit Protection Function:** When the earth connection is under good situation, power can be short time work in open state. It can avoid the laser tube burst damage caused by laser power supply, prolong the laser tube's service life.
4. **Test Mode:** One button to test the output laser manually(50% Max Power).
5. **Application:** Sculpture and cut acrylic, fabric, double color sheet, rubber etc.

II. Specification

Input	Input Voltage	AC220V or AC110V (Switch Control)
	AC Frequency	47-440HZ
	Max Input Power	250W
	Max Input Current	5A
Output	Maximum Output Voltage	DC 23KV
	Maximum Output Current	DC 20mA
Efficiency	≥90%(Full Load)	
Mean Time Between Failure (MTBF)	≥10000H	
Response Speed	≤1ms (From the switch signal is given to the output current up to 90% of the setting current)	

Withstand Voltage	Input-Output, Input-Enclosure: AC1500V 10mA 60S; Output (negative pole) is connected with machine Enclosure.
Weight	1.3kg
Environment	Working Temperature : (-10~40℃), Relative Humidity (RH)≤90%
Cooling Way	Force-Air Cooling (FAC)

III. Operation Instruction

1. Laser Tube Connection: (Referring to Power Supply and Laser Device's Connection Diagram)

High voltage terminal (HV+) of MYJG-40NW power supply should be connected to the positive pole of CO2 laser device. Current circuit of the power supply shall be connected to negative pole (laser output terminal) of laser device, through an ampere meter or directly.

2. Connection of Control Signal

The control signal shall be reliably connected to control terminal of the power supply MYJG-40 NW, after connecting the DAC output signal and TTL signal of external computer with the power supply, the laser device shall work as expected. If the laser lamp can not work properly, should check the control signal is correct or not(include check the voltage specification and logic), if use PWM control as power control, make sure $f \geq 20\text{KHz}$, amplitude (peak value) $\leq 5\text{V}$, Check and make sure protection switch WP connection is correct at same time.

3. Voltage of Power Input:

MYJG-40W's power input of the power supply shall be 220VAC/50Hz. This power supply can be adjusted for 110V or 220V.


4. Others:

A group of protection switches are also reserved for detection of water switch, fan switch, open-enclosure protection and so on.

Caution:

- 1) Water cooling system should be working properly when switching on laser device.
- 2) Circuit of high voltage output should not be open! [High voltage output terminals (positive and negative poles) shall be properly connected to positive and negative poles of laser device, respectively.]
- 3) Attentions should be given to avoid any electric shock after the power supply being switched off. (The **Insulation Safety Requirements** should be 40KV between the terminal of output and "G")
- 4) Well-grounded three-pole receptacle should be used to the supply power. The enclosure should be well grounded to avoid electric shock.

IV. The Instruction of Power Supply and Laser Wiring Diagram and Terminal

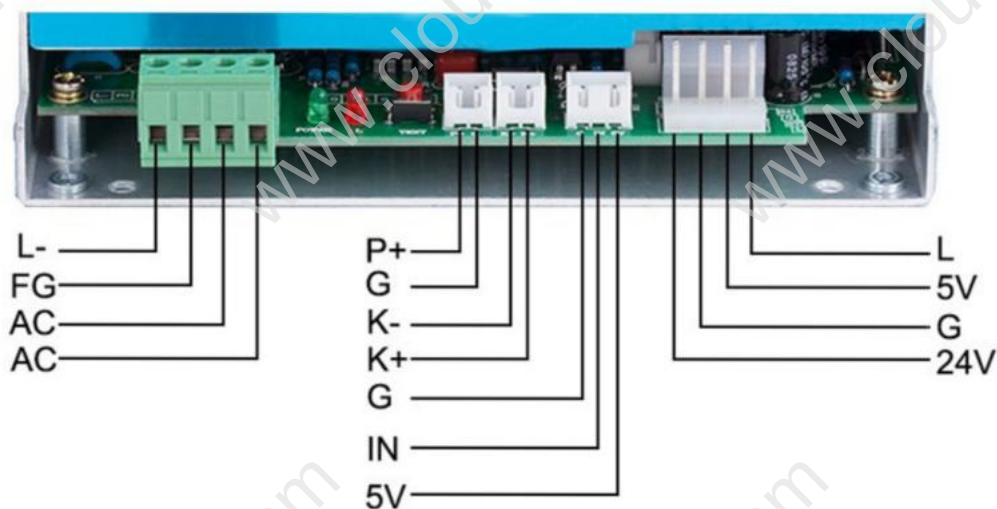

Terminal Definition as follows:

P1	L-	Connect the Negative Electrode of the Laser Tube.
	FG	Connect with G Internal, and Connect the Power Supply Shell.
	AC AC	AC 110V/220V Input.
P2	P+	Water-Protction Switch
	G	Ground: The foot must connected with laser machine's enclosure and ground properly.
	K-	Ground: The foot must connected with laser machine's enclosure and ground properly.
	K+	Switch Laser Control: High Level ($\geq 3V$) - Laser Off; Low Level ($\leq 0.3V$) -Laser On.
	G	Ground: The foot must connected with laser machine's enclosure and ground properly.
	IN	0-5V Analog Signal Control Input, also can use 5V PWM Signal to Control
	5V	5V,Max output Current 50mA
P3	24V	Output 24V, Max Current 2A.
	G	Ground: The foot must connected with laser machine's enclosure and ground properly.
	5V	Output 24V,Max Current 1A.
	L	Switch Laser Control: High Level ($\geq 3V$) - Laser Off; Low Level ($\leq 0.3V$) -Laser On.

Caution :




Figure 1




Figure 2


- 1) WP input terminal can use water switch or fan switch's test terminal, please pay attention that WP is through optocoupler connected with ground (G) as (figure2), not as (figure 1).
- 2) PWM Control: Requirements of the PWM frequency $f \geq 20$ kHz, amplitude (peak value) ≤ 5 V

Function of Control Interface:


TH	TL	WP	IN	Laser Output
unconnected	Low(≤ 0.3 V)	Low(≤ 0.3 V)	0—5V or PWM	Output laser Power: Pmin~Pmax
	Low(≤ 0.3 V)		unconnected	Output about 40% laser
	High(≥ 3 V)		Any value (ok)	No laser
High(≥ 3 V)	Unconnected	Low(≤ 0.3 V)	0—5 or PWM	Output laser, Pmin~Pmax
Low(≤ 0.3 V)			Unconnected	Output about 40% laser
Low(≤ 0.3 V)			Any value (ok)	No laser
Any value (ok)	Any value (ok)	High(≥ 3 V)		No laser

VI. The connection of power supply and control board

1.Recommended connection: High-level light control

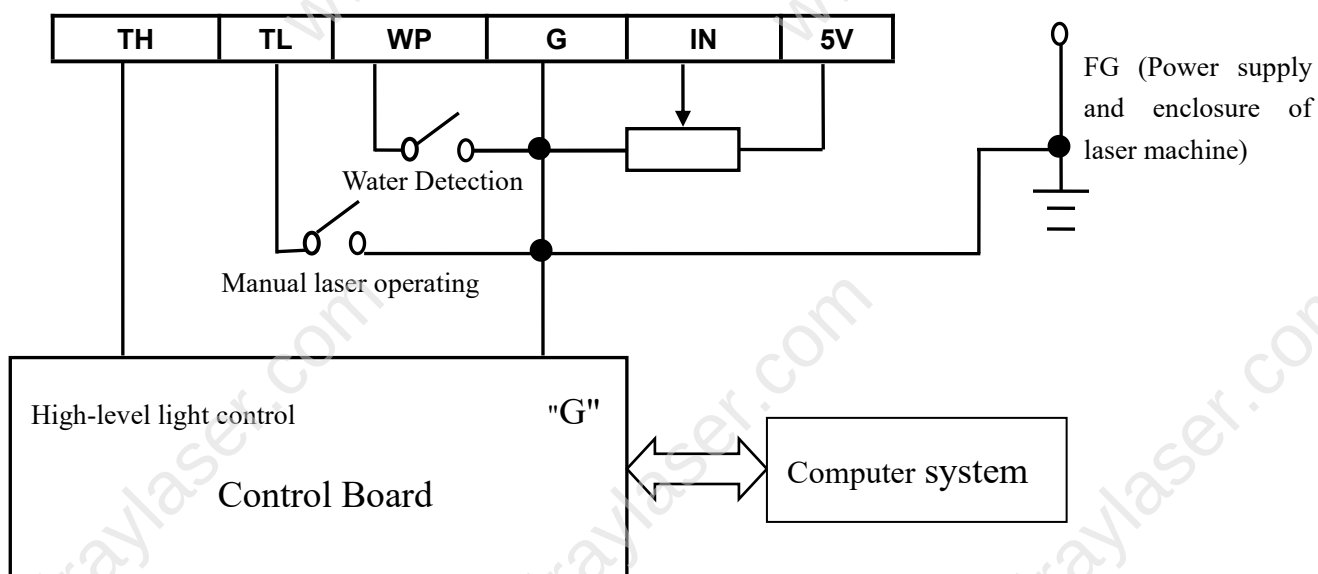

2. Recommended connection: Low-level light control

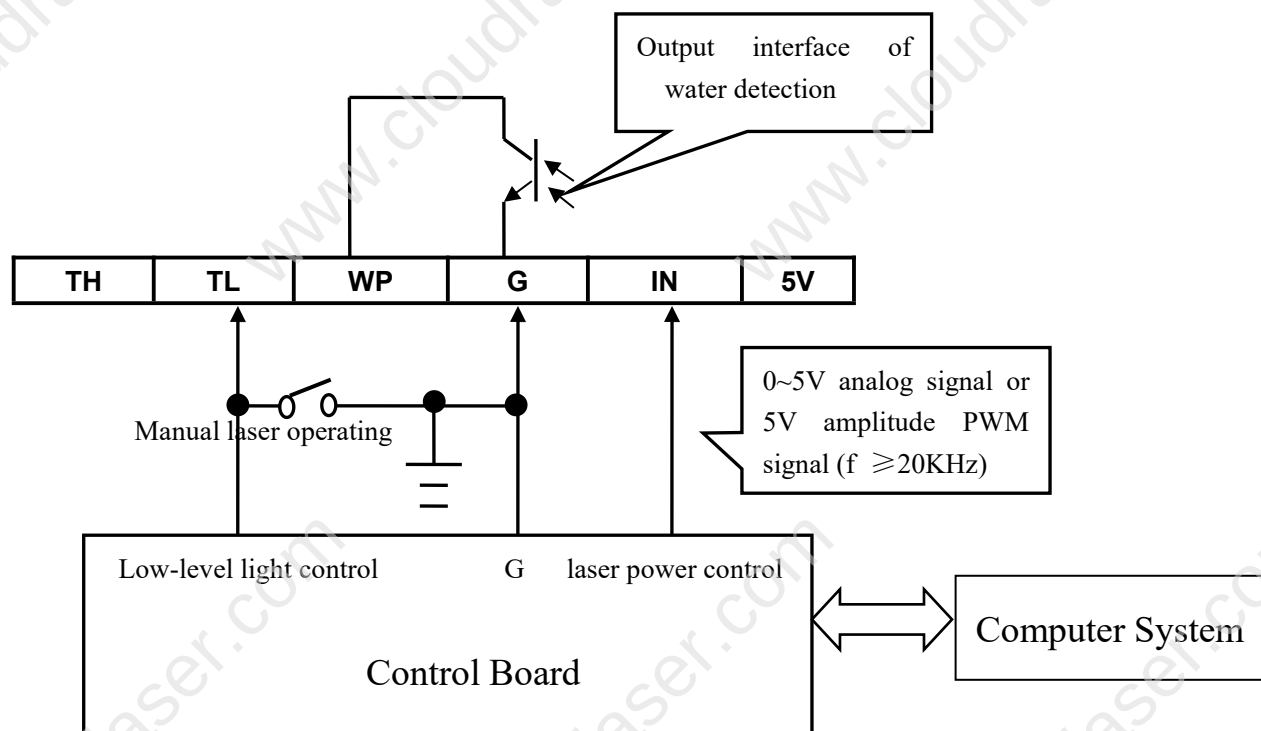

VII. Check the power supply worked properly or not manually

Make sure the power supply and laser tube wiring correct. Unplug the control pins and then press the "TEST" button to test laser tube fire or not. The power supply and laser tube can be judged working properly via this method.

VIII. Common Fault Detection and Ruled Out

Problem	Cause	Estimation	Solution
Trip After Power On	1. External Wiring: AC and FG reverse connection	Check if AC and FC misplaced	Connected correctly according to Instruction
	2. External Wiring: Short circuit between AC and AC	Use multimeter to check if short circuit between AC and AC.	Rewiring, and avoid short circuit
	3. Internal Wiring: Short circuit between AC and AC or AC and FG		Send back factory for maintenance
	4. Other Causes		
AC Power On but Fan of Power	1. Fan socket is loose.	Laser emission when manual test.	Open enclosure and tighten socket.
	2. Fan damaged	Laser emission when manual test.	Change fan or send back factory for maintenance

Supply Does not work	3. Fuse is burned.	No laser emission when manual test.	Contact with us for repair.
AC power on but no laser emission	1. Control wire connected wrong	Check if wire is connected correctly according to Operation Instruction	Rewiring correctly
	2. Internal connector is loose.	Open outside case and check	Tighten connector.
	3. Protection switch on but on water through or water through switch is broken.	Voltage>0.5V between "WP"and"G"	Water through or change water through switch.
	4. Wrong output laser signal	Voltage between"TH " and "G" should<3V when When laser-open controlled by high level	Replace CNC card or change GND.
		Voltage between"TL" and "G" should>3V when laser-open controlled by low level.	
	5. Power control signal is 0.	Voltage between "IN"and "G" is 0.	Increase voltage between "IN"and "G".
	6. Fuse is burned.	Fan does not work	Send back factory for maintenance
Laser emission at all times	7. Others		Send back factory for maintenance
	1.When "TL" control laser: short circuit between"TL "and "G".	Voltage between"TL " and "G" =0	disconnected between"TL "and "G".
	2. Circuit is broken.		Send back factory for maintenance
	3. Switch of manual test laser emission is broken.		Change switch of manual test laser emission.
Current is not increased	4. Other causes.		Send back factory for maintenance
	1. AC voltage is too low	Output current is always at 5mA around.	Use AC voltage regulator.
	2. Power supply and laser Device is not connected very well		Send back factory for maintenance
	3. Power control signal from CNC card is not connected very well with "IN".	Output current is always at 10mA around.	Re-connected
	3. Potentiometer of power is broken.	Output current is not stable.	Change potentiometer.
	4. PWM frequency or amplitude is not suitable.		Change PWM frequency or amplitude.

	5. Internal Transformer is broken.	Output current is always at 5mA around	Send back factory for maintenance
	6. One circuit does not work.		
	7. Others		
Laser head is not stable during working.	GND is not connected well.		Connect earth wire of CNC card, enclosure of power supply, with enclosure of laser machine.
Laser emission is not stable during working.			
When two laser head works, action abnormal.			